

GENERAL DELUXE

Chest Freezer

GCF 215

GCF 315

■ Please carefully read the operation instructions before power on, and keep it properly.

■ The products may subject to changes without notice.

TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	3
Warning	4
Cautions	6
STRUCTURE ILLUSTRATION	8
INSTRUCTIONS FOR USING	9
TROUBLE SHOOTING	10

1. IMPORTANT SAFETY INSTRUCTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.
2. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
3. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance must not be carried out by children without supervision.
4. **WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction
5. **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
6. **WARNING:** Do not damage the refrigerant circuit.
7. **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
8. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
9. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices, and other working environments;
 - Farm houses and by clients in hotels, motels, and other residential-type environments;
 - Bed and breakfast-type environments;
 - Catering and similar non-retail applications

2. Warning

Warning: No barrier should be placed around the appliance or within the built-in structure to ensure free ventilation.

Warning: It is forbidden to speed up the defrosting process using any mechanical equipment or by any method other than that recommended by the manufacturer.

Warning: Do not damage the refrigerant circuit.

Warning: Do not use any electrical appliances inside the food chamber of the appliance unless they are of the type recommended by the manufacturer.

Warning: Do not place liquid beverages or food contained in glass containers in the freezing chamber to prevent breakage and shattering.

Warning: If the refrigerator is powered off, it should be powered on again 5 minutes later to prevent damage to the compressor.

Warning: If any live part, abnormal noise, smell, smoke, or other abnormalities are noticed during use, it is essential to immediately power off the appliance and promptly contact the after-sales service department of the company.

Warning: Avoid placing your finger or hand under the refrigerator, especially at the rear bottom, as sharp objects may cause injury

Warning: Children must not play or climb on the refrigerator. Parents must supervise children to prevent potential danger.

Warning: Avoid placing your hand between the doors to open or close them to prevent jamming your fingers. Always use the door handle to open or close the door.

For refrigerating appliances with climate class

Depending on the climate class, this refrigerating appliance is intended to be used at the ambient temperature range specified below.

The climate class can be found on the rating plate. The product may not operate properly at temperatures outside the specific range.

You can find the climate class on the label inside your refrigerator.

Effective temperature range

Class	symbol	Ambient Temperature range (°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

The refrigerator is designed to operate normally within the temperature range specified by its class rating.

Warning: Risk of fire / flammable materials

Warning: When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning: Avoid placing multiple portable socket outlets or power supplies at the rear of the appliance.

Children aged 3 to 8 years are allowed to load and unload refrigerating appliances. Prolonged door opening can lead to a significant increase in temperature within the appliance compartments.

Regularly clean surfaces that come into contact with food and accessible drainage systems. Clean water tanks if they have not been used for 48 hours; flush the water system connected to a water supply if water has not been drawn for 5 days.

Store raw meat and fish in suitable containers in the refrigerator to prevent contact with or dripping onto other food.

If the refrigerating appliance is left empty for extended periods, switch it off, defrost, clean, dry, and leave the door open to prevent mold from developing within the appliance.

WARNING: Keep the key out of reach of children and away from the appliance to prevent children from being locked inside.

Warning: When positioning the appliance, ensure the supply cord isn't trapped or damaged.

Warning: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

2. Cautions

Cautions: The power supply for this product must match the power supply stated on the nameplate, and a standard independent 3-hole socket rated above 10A and reliably grounded must be used. Avoid sharing one socket among multiple appliances to prevent overheating and potential fire hazards.

Cautions: Avoid pulling the power wire by hand. Always hold and unplug the power connector from the socket to disconnect the power supply.

Do not touch the power wire or connector with wet hands to prevent the risk of electric shock.

Cautions: Do not allow the power wire to be squeezed by the refrigerator or any heavy load, and avoid extreme bending of the power wire.

Damage or peeling of the power wire may lead to fire or electric shock hazards.

If the power wire is broken or cut, please contact the after-sales service department immediately for assistance.

Cautions: Do not store any flammable or explosive materials, corrosive acids, or alkaline substances in the refrigerator

Cautions: Do not use the refrigerator in rainy conditions or under direct sunlight.

Cautions: Do not place containers with fluids on the refrigerator, as breaking or overturning the container may compromise the electrical insulation of the refrigerator, leading to electric shock or fire hazards.

Cautions: The refrigerator must not be disassembled or modified without permission. The repair of the refrigerator must be performed by a specialist.

Cautions: In the event of a leak of any flammable gas such as coal gas, first close the leaking valve, then open the window for ventilation. Do not unplug the refrigerator connector immediately to avoid the risk of fire or explosion due to electric sparks.

Cautions: Refrigerating appliances, especially Type I refrigerator-freezers, may not operate consistently if sited for an extended period below the cold end of the temperature range for which the appliance is designed. This may result in defrosting of contents or the temperature becoming too warm in the frozen food compartment

Cautions: Sparkling drinks should not be stored in food freezer compartments or cabinets, or in low-temperature compartments or cabinets. Additionally, some products, such as iced water, should not be consumed when excessively cold.

Cautions: Do not exceed the storage times recommended by food manufacturers for any kind of food.

Cautions: Take precautions to prevent an undue rise in the temperature of frozen food while defrosting the refrigerating appliance.


Cautions: The rise in temperature of frozen food during manual defrosting, maintenance, or cleaning may reduce its storage life.

Cautions: Ensure proper care for frozen food storage during extended periods when the refrigerating appliance is not running, such as during a power outage or refrigeration system failure.

Cautions: Steps to take when temporarily or permanently switching off the refrigerating appliance include emptying, cleaning, and drying it, and propping the door(s)

STRUCTURE ILLUSTRATION

When positioning the appliance, ensure that there is at least a 10 cm clearance at the sides and a 10 cm clearance at the back as this is the main outlet for heat. This will allow for ventilation.

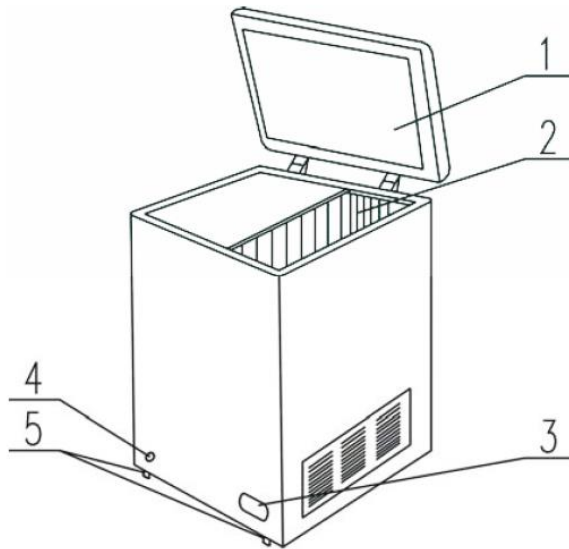

- 1. Door
- 2. Basket
- 3. Control panel
- 4. Drain piug
- 5. Adjustable feet

The drawing and number of shelves are given for reference only.
The information may be subject to ch

INSTRUCTIONS FOR USING

1. Unpack all packages before using the chest-freezer. Do not topple it over more than 60° while moving it. Even though it can be moved slowly with the universal wheels under its base, the wheels were not meant for uneven ground usage which may damage it and other parts if used vigorously.
2. Place the chest-freezer at your desired place and do not operate it for at least 1 hour. The chest-freezer should be installed in the environment of good ventilation, cool and dry. Avoid placing it nearby heat generating equipment and under direct sunlight. When installing, the universal wheels should be padded firmly so as to avoid excess vibration and noise.
3. After 1 hour it should be run empty upon initial operation. Please turn the thermostat knob to 7 and food can be stored just after 4 hours of initial running. Food must occupy 1/3 of the storage area and evenly arranged. They must be wrapped in plastic bags to obtain the original freshness and taste.
4. Temperature can be adjusted by using the thermostat. Clockwise turning will decrease the temperature whilst anti-clockwise to increase. Figures shown indicate the temperature level 3-5 for normal, 0 for stop running and 7 for continuously running.

Caution: No 7 can only be used if the foods need to be frozen quickly.
Caution: Please unplug the power cord before cleaning the unit.
5. Do not frequently open and shut the freezer door to avoid loss of cooling effect and to save energy.
6. The surface and inside of the freezer should be kept clean at all time to avoid body rust.
7. Generally, clean the freezer after every 30-45 days of usage. Please use soft cloth moistened in neutral soapsuds or detergent.

TROUBLE SHOOTING


Please refer to the troubleshooting lists to overcome any minor problems that occurs during operations.

Phenomenon	Problem Cause		Insp. Content	Remedy
RED light not functioning	No Electricity	Fuse Broken	Check fuse	Replace fuse
		Loose plug and	Check for loose contact	Replace or service
	With electricity	Loose red bulb	Remove red bulb	Tighten the bulb
		Broken red bulb	Remove red bulb	Replace red bulb
Green lighth not functioning	Compressor working well	Loose green bulb	Check for loose contact	Tighten the bulb
		Broken green	Remove green	Replace the bulb
		Loose thermosta	Check thermosta	Tighten the
	Compressor not	Loose thermosta	Check for loose contact	Tighten the
		Thermostat damage	Check for short circuit	Replace the

Phenomeno	Problem Cause		Insp. Conte	Remedy
Non-stop running of machine	Does not refrigerate well	Thick frost on surface Door open frequently Too much food stored	Check thickness ≤5mm	Defrost time Avoid open Lessen the quantity
	Refrigerate well	R134a/R12 leaked Set temp < ambient temp Thermostat not working	Check temp level "5-6"	Adjust level to "2-4" Replace thermostat
Too noisy	Refrigerator installed on an uneven ground		Check universal wheels	Put on a level and even
	Loose screws at condenser or compressor		Check for loose screws	Tighten the loose screws
Compressor not working but red and green light working	Loose of starting relay or heat preventing socket		Check damaged contact	Tighten the connection
	Compressor damaged			Repair/ service compressor
	Voltage less than 187V		Check the voltage level	Use a power regulator

**We decline liability for any damage or accident derived from any use of this product which is not in conformity with the instructions contained in this booklet.
The information may be subject to change without prior notice.**

CORRECT DISPOSAL OF THIS PRODUCT

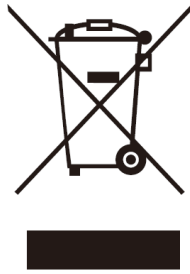

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

GENERAL DELUXE

فريزر افقي

GCF 215

GCF 315

يرجى قراءة تعليمات التشغيل بعناية قبل تشغيل الطاقة، والاحتفاظ بها بشكل صحيح.

قد تخضع المنتجات للتغيير دون إشعار.

جدول المحتويات

تعليمات السلامة الهامة	3
تحذير	4
الاحتياطات	6
توضيح الهيكل	8
تعليمات الاستخدام	9
استكشاف الأخطاء وإصلاحها	10

1. تعليمات السلامة الهامة

١. هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو الذين يفتقرون إلى الخبرة والمعرفة، إلا إذا خضعوا لإشراف أو توجيه من شخص مسؤول عن سلامتهم بشأن استخدام الجهاز. يجب مراقبة الأطفال لضمان عدم لعبهم بالجهاز.
2. إذا كان سلك الطاقة تالفاً، فيجب استبداله من قبل الشركة المصنعة أو وكيل الخدمة التابع لها أو الأشخاص المؤهلين على نحو مماثل لتجنب المخاطر.
٣. يُسمح باستخدام هذا الجهاز من قبل الأطفال بعمر ٨ سنوات فما فوق، والأشخاص ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو الذين يفتقرون إلى الخبرة والمعرفة، إلا إذا خضعوا للإشراف أو التوجيه بشأن الاستخدام الآمن للجهاز، وفهموا المخاطر التي ينطوي عليها. يُمنع الأطفال من اللعب بالجهاز. ويُمنع تنظيفه وصيانته من قبل الأطفال دون إشراف.
4. **تحذير :** حافظ على فتحات التهوية في حاوية الجهاز أو في الهيكل المدمج خالية من العوائق
5. **تحذير :** لا تستخدم أجهزة ميكانيكية أو وسائل أخرى لتسريع عملية إزالة الجليد، بخلاف تلك الموصى بها من قبل الشركة المصنعة.
6. **تحذير :** لا تتسبب في إتلاف دائرة التبريد.
7. **تحذير :** لا تستخدم الأجهزة الكهربائية داخل حجرات تخزين الطعام في الجهاز، إلا إذا كانت من النوع الموصى به من قبل الشركة المصنعة.
8. لا تقم بتخزين المواد المتفجرة مثل علب الهباء الجوي التي تحتوي على مادة دافعة قابلة للاشتعال في هذا الجهاز.
9. تم تصميم هذا الجهاز للاستخدام في التطبيقات المنزلية والتطبيقات المماثلة مثل:
مناطق المطبخ المخصصة للموظفين في المحلات التجارية والمكاتب وبيئات العمل الأخرى؛
المزارع ومن قبل العملاء في الفنادق والموتيلات وغيرها من البيئات السكنية؛
بيئات من نوع المبيت والإفطار؛
تطبيقات المطاعم والتطبيقات المماثلة غير المخصصة للبيع بالتجزئة

2. تحذير

تحذير : لا ينبغي وضع أي حاجز حول الجهاز أو داخل الهيكل المدمج لضمان التهوية الحرة.

تحذير : يُمنع تسريع عملية إزالة الجليد باستخدام أي جهاز ميكانيكي أو أي طريقة أخرى غير تلك الموصى بها من قبل الشركة المصنعة.

تحذير : لا تقم بإتلاف دائرة التبريد.

تحذير : لا تستخدم أي أجهزة كهربائية داخل حجرة الطعام بالجهاز إلا إذا كانت من النوع الموصى به من قبل الشركة المصنعة.

تحذير : لا تضع المشروبات السائلة أو الأطعمة الموجودة في حاويات زجاجية داخل حجرة التجميد لمنع الكسر والتحطيم.

تحذير : إذا تم إيقاف تشغيل الثلاجة، فيجب تشغيلها مرة أخرى بعد 5 دقائق لمنع تلف الضاغط.

تحذير : إذا لاحظت أي جزء حي أو ضوضاء غير طبيعية أو رائحة أو دخان أو أي تشوهات أخرى أثناء الاستخدام، فمن الضروري إيقاف تشغيل الجهاز على الفور والاتصال على الفور بقسم خدمة ما بعد البيع بالشركة.

تحذير : تجنب وضع إصبعك أو يدك تحت الثلاجة، وخاصة الجزء السفلي الخلفي، حيث قد تتسبب الأشياء الحادة في حدوث إصابات.

تحذير : يُمنع الأطفال من اللعب أو التسلق على الثلاجة. يجب على الأهل مراقبة أطفالهم لتجنب أي خطر محتمل.

تحذير : تجنب وضع يدك بين الأبواب لفتحها أو إغلاقها لتجنب حشر أصابعك. استخدم دائمًا مقبض الباب لفتح الباب أو إغلاقه.

للأجهزة المبردة ذات الفئة المناخية

اعتمادًا على فئة المناخ، تم تصميم جهاز التبريد هذا ليتم استخدامه في نطاق درجة الحرارة المحيطة المحددة أدناه.

يمكن العثور على فئة المناخ على لوحة التقييم. قد لا يعمل المنتج بشكل صحيح في درجات حرارة تتجاوز النطاق المحدد.

يمكنك العثور على فئة المناخ على الملصق الموجود داخل فريزر .

نطاق درجة الحرارة الفعالة

Class	symbol	Ambient Temperature range (°C)
Extended Temperate	SN	+10 to +32
Temperate	N	+16 to +32
Subtropical	ST	+16 to +38
Tropical	T	+16 to +43

تم تصميم الثلاجة للعمل بشكل طبيعي ضمن نطاق درجة الحرارة المحددة حسب تصنيف فئتها.
تحذير: خطر نشوب حريق / مواد قابلة للاشتعال

تحذير : عند وضع الجهاز، تأكد من عدم تعرض سلك الطاقة للاحتجاز أو التلف.

تحذير : تجنب وضع عدة منافذ كهربائية محمولة أو مصادر طاقة في الجزء الخلفي من الجهاز.

يُسمح للأطفال من سن 3 إلى 8 سنوات بتحميل وتفريغ أجهزة التبريد. قد يؤدي فتح الباب لفترة طويلة إلى ارتفاع كبير في درجة حرارة حجرات الأجهزة.

قم بتنظيف الأسطح التي تلامس الطعام وأنظمة الصرف الصحي المتاحة بانتظام.
قم بتنظيف خزانات المياه إذا لم يتم استخدامها لمدة 48 ساعة؛ قم بشطف نظام المياه المتصل بمصدر المياه إذا لم يتم سحب المياه لمدة 5 أيام.
قم بتخزين اللحوم والأسماك النيئة في حاويات مناسبة في الثلاجة لمنع ملامستها أو تساقطها على الأطعمة الأخرى.

إذا تم ترك جهاز التبريد فارغًا لفترات طويلة، فقم بإيقاف تشغيله، ثم قم بإزالة الجليد عنه، ونظفه، وجففه، واترك الباب مفتوحًا لمنع نمو العفن داخل الجهاز.

تحذير : احفظ المفتاح بعيدًا عن متناول الأطفال وبعيدًا عن الجهاز لمنع حبس الأطفال بالداخل.

تحذير : عند وضع الجهاز، تأكد من عدم تعرض سلك الطاقة للاحتجاز أو التلف.

تحذير : لا تقم بتثبيت عدة مقابس كهربائية محمولة أو مصادر طاقة محمولة في الجزء الخلفي من الجهاز.

2. الاحتياطات

تحذيرات : يجب أن يتوافق مصدر الطاقة لهذا المنتج مع مصدر الطاقة المذكور على لوحة الاسم، ويجب استخدام مقبس كهربائي قياسي مستقل بثلاث فتحات، مصنف فوق 10 أمبير، ومعرض بشكل موثوق. تجنب استخدام مقبس واحد بين عدة أجهزة لتجنب ارتفاع درجة الحرارة واحتمالية نشوب حريق.

تحذيرات : تجنب سحب سلك الطاقة يدويًا. أمسك دائمًا موصل الطاقة وافصله عن المقبس لفصل مصدر الطاقة.

لا تلمس سلك الطاقة أو الموصل بأيدي مبللة لتجنب خطر التعرض لصدمة كهربائية.

تحذيرات : لا تسمح للثلاجة أو أي حمل ثقيل بالضغط على سلك الطاقة، وتجنب الانحناء الشديد لسلك الطاقة.

قد يؤدي تلف أو تقشير سلك الطاقة إلى نشوب حريق أو التعرض لخطر الصدمة الكهربائية.

في حالة كسر أو قطع سلك الطاقة، يرجى الاتصال بقسم خدمة ما بعد البيع على الفور للحصول على المساعدة.

تحذيرات : لا تقم بتخزين أي مواد قابلة للاشتعال أو الانفجار، أو الأحماض المسببة للتآكل، أو المواد القلوية في الثلاجة. تنبيهات: لا تستخدم الثلاجة في ظروف ممطرة أو تحت أشعة الشمس المباشرة.

تحذيرات : لا تضع حاويات تحتوي على سوائل على الثلاجة، حيث أن كسر الحاوية أو قلبها قد يؤدي إلى إتلاف العزل الكهربائي للثلاجة، مما يؤدي إلى التعرض لصدمة كهربائية أو مخاطر نشوب حريق.

تحذيرات : يُمنع تفكيك الثلاجة أو تعديلها دون إذن. يجب أن يُجري فني متخصص إصلاحها.

تحذيرات : في حال تسرب أي غاز قابل للاشتعال، مثل غاز الفحم، أغلق صمام التسرب أولاً، ثم افتح النافذة للتهوية. لا تفصل موصل الثلاجة فورًا لتجنب خطر الحريق أو الانفجار بسبب الشرر الكهربائي.

تحذيرات : قد لا تعمل أجهزة التبريد، وخاصةً ثلاجات التجميد من النوع الأول، بشكل منتظم إذا وُضعت لفترة طويلة تحت الحد البارد لنطاق درجة الحرارة المُصمم له الجهاز. قد يؤدي ذلك إلى إذابة تجميد المحتويات أو ارتفاع درجة الحرارة بشكل مفرط في حجرة الطعام المُجمد.

تحذيرات : لا يُنصح بتخزين المشروبات الغازية في حجرات أو خزائن تجميد الطعام، أو في حجرات أو خزائن منخفضة الحرارة. كما يُنصح بعدم تناول بعض المنتجات، مثل الماء المثلج، وهي باردة جدًا.

تحذيرات : لا تتجاوز أوقات التخزين الموصى بها من قبل مصنعي الأغذية لأي نوع من الأطعمة.

تحذيرات : اتخذ الاحتياطات اللازمة لمنع ارتفاع درجة حرارة الأطعمة المجمدة بشكل غير مبرر أثناء إذابة تجميد جهاز التبريد.


تحذيرات : قد يؤدي ارتفاع درجة حرارة الأطعمة المجمدة أثناء إزالة الجليد عنها يدويًا أو الصيانة أو التنظيف إلى تقليل مدة تخزينها.

احتياطات : تأكد من العناية المناسبة بتخزين الأطعمة المجمدة أثناء فترات طويلة عندما لا يعمل جهاز التبريد، مثل أثناء انقطاع التيار الكهربائي أو فشل نظام التبريد.

تحذيرات : تتضمن الخطوات التي يجب اتخاذها عند إيقاف تشغيل جهاز التبريد مؤقتًا أو بشكل دائم إفراغه وتنظيفه وتجفيفه ودعم الباب (الأبواب)

توضيح الهيكل

عند وضع الجهاز، تأكد من وجود مسافة خالية لا تقل عن 10 سم عند الجوانب ومساحة خالية 10 سم في الخلف حيث أن هذا هو المخرج الرئيسي للحرارة. هذا سوف يسمح بالتهوية.

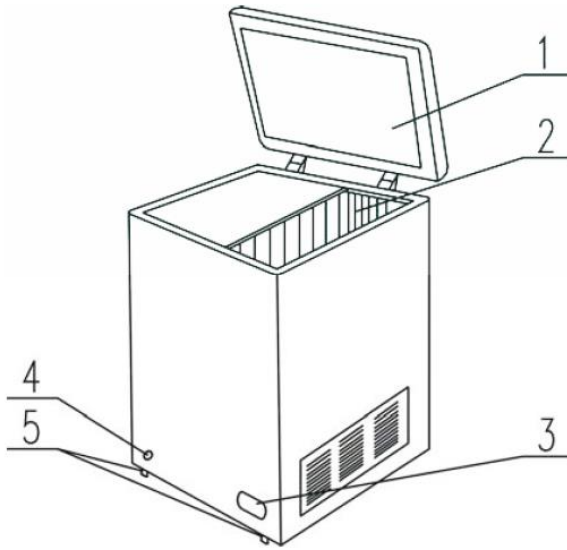

1. Door باب الفريزر

2. Basket السلة الداخلية

3. Control panel لوحة التحكم

4. Drain piug مخرج التصريف

5. Adjustable feet أرجل الفريزر

The drawing and number of shelves are given for reference only.

The information may be subject to ch

تعليمات الاستخدام

1. فكّ جميع العبوات قبل استخدام المُجمّد الصندوقي. لا تُسقطها، أي فوق المزيد من أكثر من 60 درجة أثناء تحريكه. على الرغم من إمكانية تحريكه ببطء باستخدام المقبض ، العجلات الموجودة أسفل قاعدتها، لم تكن العجلات مخصصة للاستخدام على أرض غير مستوية والتي قد يؤدي الاستخدام العنيف إلى إتلافها وأجزاء أخرى.
2. ضع الثلاجة المجمدة في المكان الذي تريده ولا تقم بتشغيلها لمدة ساعة على الأقل. ساعة. يجب تركيب الثلاجة المجمدة في بيئة جيدة التهوية، بارد وجاف. تجنب وضعه بالقرب من معدات توليد الحرارة وتحت أشعة الشمس المباشرة. ضوء الشمس. عند التركيب، يجب أن تكون العجلات العالمية مبطنة بإحكام بحيث تجنب الاهتزاز والضوضاء الزائدة.
3. بعد ساعة واحدة، يجب تشغيل الجهاز فارغًا عند التشغيل الأولي. يُرجى تدوير يمكن ضبط مقبض الترموستات على الدرجة 7 وتخزين الطعام بعد 4 ساعات فقط من التشغيل الأولي. يجب أن يشغل الطعام ثلث مساحة التخزين وأن يكون مُرتّبًا بالتساوي. مغلفة بأكياس بلاستيكية للحصول على النظافة والطعم الأصلي.
4. يمكن تعديل درجة الحرارة باستخدام منظم الحرارة. سيتم تدوير الجهاز مع عقارب الساعة. خفض درجة الحرارة عكس اتجاه عقارب الساعة لزيادة درجة الحرارة. تشير الأرقام المعروضة إلى مستوى درجة الحرارة 3-5 للعمل العادي، و0 للتوقف عن التشغيل و7 للعمل المستمر. تنبيه: لا يمكن استخدام رقم 7 إلا إذا كانت الأطعمة بحاجة إلى التجميد بسرعة. تنبيه: يرجى فصل سلك الطاقة قبل تنظيف الوحدة.
5. لا تفتح وتغلق باب الفريزر بشكل متكرر لتجنب فقدان تأثير التبريد وللحفاظ على الطاقة.
6. يجب الحفاظ على سطح وداخل الفريزر نظيفين دائمًا لتجنب صدم الجسم.
7. عادةً، نظّف المُجمّد كل ٣٠-٤٥ يومًا من الاستخدام. يُرجى استخدام منظف ناعم. قطعة قماش مبللة برغوة الصابون المحايدة أو المنظفات.

استكشاف الأخطاء وإصلاحها

يرجى الرجوع إلى قوائم استكشاف الأخطاء وإصلاحها للتغلب على أي مشاكل بسيطة تحدث أثناء العمليات.

ظاهرة	سبب المشكلة		الاجراء التفقيشي	حل المشكلة
الضوء الاحمر لا يعمل	لا يوجد كهرباء	تلف بالمصهر	فحص المصهر	استبدال المصهر
		تلف في الكيبل	تأكد من التلف	استبدال الكيبل
	يوجد كهرباء	وميض بالضوء الاحمر	تأكد من شد الضوء الاحمر	شد اللمبة
		تلف بالضوء الاحمر	ازالة الضوء الاحمر	استبدال الضوء الاحمر
الضوء الأخضر لا يعمل	الضاغط يعمل	وميض بالضوء الاخضر	تأكد من شد الضوء الاخضر	شد اللمبة
		تلف بالضوء الاخضر	ازالة الضوء الاخضر	استبدال الضوء الاخضر
		ثيرموستات غير مشدودة	تأكد من الثيرموستات	شد الثيرموستات
	الضاغط لا يعمل جيدا	ثيرموستات غير مشدودة	تأكد من الثيرموستات	شد الثيرموستات
		الثيرموستات تالفة	تأكد من وجود قصر بالثيرموستات	استبدال الثيرموستات

ظاهرة	سبب المشكلة		الاجراء التففتيشي	حل المشكلة
تشغيل الآلة بدون توقف	لا يبرد بشكل جيد	الصقيع الكثيف على السطح	تحقق من سمك ملم ≤ 5	وقت تذويب
		الباب مفتوح بشكل متكرر		تجنب فتح
		تخزين الكثير من الطعام		قلل الكمية
	تبرد جيدا	تسريب غاز	التحقق من مستوى درجة الحرارة -5° -6°	
		ضبط درجة الحرارة $>$ المحيطة		اضبط المستوى على 2° -4°
		الثيرموستات لا يعمل		استبدل الثيرموستات
الصوت مرتفع	الثلاجة مثبتة على أرض غير مستوية		افحص عجلات الفريزر	وضع على سطح مستوي
	مسامير غير مشدودة في المثف او الضاغط		افحص البراغي	قم بشد البراغي
الضاغط لا يعمل ولكن الضوء الأحمر والأخضر يعمل	عدم شد المرحل البدء أو مقبس منع الحرارة		قم بفحص التوصيلات الكهربائية	قم بشد التوصيلات
	الضاغط تالف			خدمة الصيانة ضاغط
	الجهد أقل من 187 فولت		تحقق من مستوى الجهد	استخدم منظم الطاقة

نحن نرفض المسؤولية عن أي ضرر أو حادث ناتج عن أي استخدام لهذا المنتج وهو ما لا يتوافق مع التعليمات الواردة في هذا الكتيب. قد تكون المعلومات عرضة للتغيير دون إشعار مسبق.

CORRECT DISPOSAL OF THIS PRODUCT



التخلص الصحيح من هذا المنتج

تشير هذه العلامة إلى أنه لا ينبغي التخلص من هذا المنتج مع النفايات المنزلية الأخرى في جميع أنحاء الاتحاد الأوروبي. لتجنب أي ضرر محتمل على البيئة أو صحة الإنسان نتيجة التخلص غير المنضبط من النفايات، يُرجى إعادة تدويره بطريقة مسؤولة لتعزيز إعادة الاستخدام المستدام للموارد المادية. لإعادة جهازك المستعمل، يُرجى استخدام أنظمة الإرجاع والاستلام أو التواصل مع البائع الذي اشتريت منه المنتج. يمكنهم إعادة تدوير هذا المنتج بطريقة آمنة بيئيًا.